



5. Childproof Lid

To remove the lid, push down on one end and lift at the opposite end.

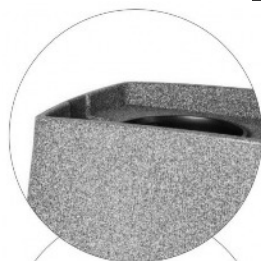


Lid removed to show planter

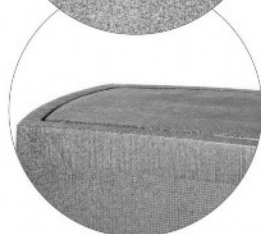


Lid on (press down on one end to remove lid)

Tank-to-Tank Connection

It is possible to connect two Boxy tanks together using the drain-down points near the base of the tanks. We recommend using the Tank-to-Tank Connection Kit 250 mm (No. 9000326).

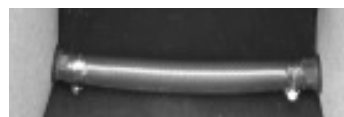

a)

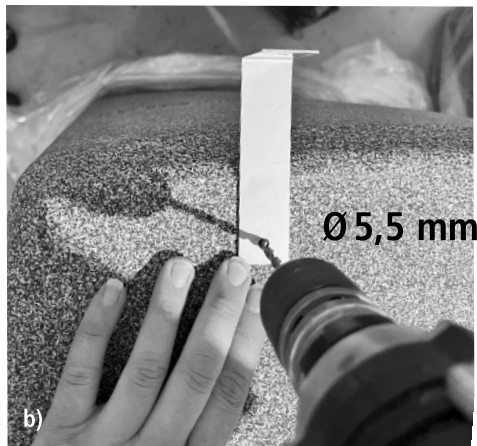

Ø5,5 mm

b)

6. Installing the Wall Bracket (optional)

- Locate a suitable position.
- Mark the position and drill.
- Attach the bracket to the tank using the nut and bolt supplied.
- Attach the bracket to the wall using the screw supplied.


Note: You may need to use alternative fittings depending on your wall type. If in doubt, consult a professional.

Instructions

To fill the Boxy, we recommend using the 3P Filter Collector Universal.





The 3P Filter Collector Universal is available in 3 colours and comes with a 30cm hose.

Where the water butt cannot be located within 30cm of the downpipe, the longer Universal Long Link Kits are available online (Art. No. 9000123U to U5).

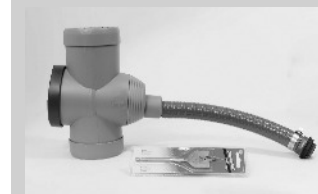

The Boxy is supplied with an accessory kit which includes a chrome tap, planters, optional wall bracket, and screws.

If in any doubt during installation, please consult a professional tradesperson.

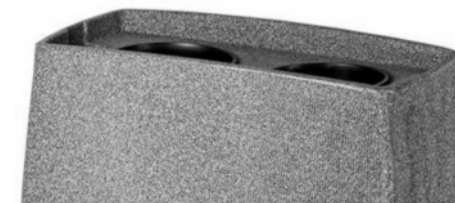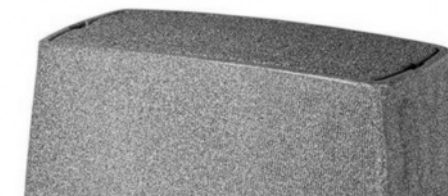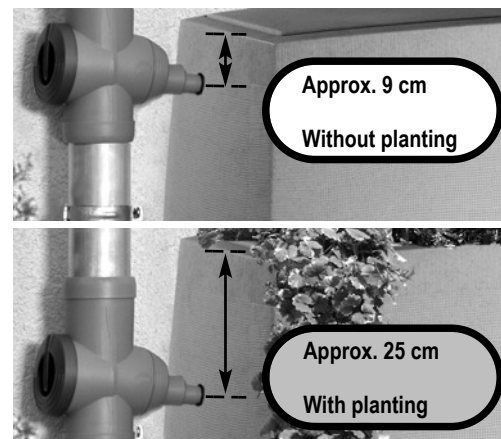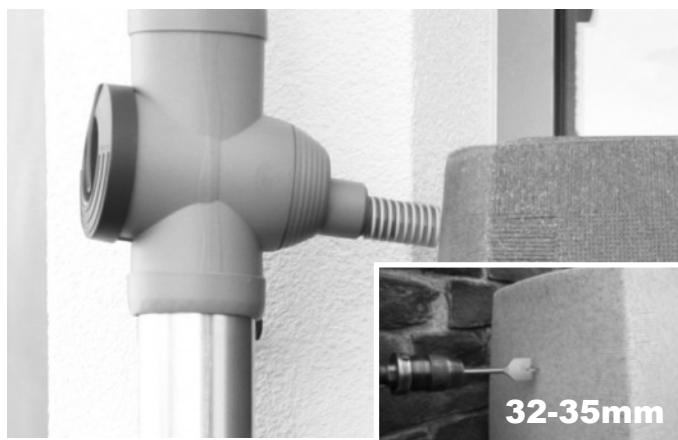

1. Setting Up

Site the Boxy on a firm, level surface, adjacent to the downpipe. Siting on soft or uneven ground can cause deformation of the tank over the long term.

When the tank is full is must not touch your wall or any other tanks at any point. Therefore, before filling, position the tank at least **70mm** away from the wall and other tanks. This will allow the Boxy walls to naturally flex all around as it is filled with water.

Once the Boxy is full, check that the Tank is not touching your wall at any point. Reposition as necessary.

2. Fitting the 3P Filter Collector Universal Link Kit

Marking Out

Measure carefully across from the downpipe to the Boxy to connect the Filter Collector Universal and mark the entry point for the filter.

We recommend measuring 9cm from the top of the butt without planting and 25cm from the top with planting. These positions are ideal for all connections of 32mm (1 1/4") or less. Mark the point.

Hole Cutter / Drill Selection - 32mm to 35mm

To fill the water butt with the recommended 3P Filter Collector Universal, select the 35mm flat bit provided with the 3P Filter Collector Universal.

Drilling

Offer the 35mm drill to your marked point, proceed to drill. If you are not fitting a 3P Filter Collector Universal, double check you are drilling the correct sized hole for your chosen connection set.

Attaching a Backnut & Hosetail

Hold the backnut on the inside of the hole and screw on the hosetail and rubber grommet on the outside.



3. Connecting the Tap

Screw the tap provided into the 3/4" BSP connection thread. **Do not over tighten.**

Use PTFE tape on metal taps for extra protection, and to make sure that the tap sits in the correct position *.

Other 3/4" tap fittings can be used.

*** Top Tip!** Before filling with water, check the drain-downs point are fully tightened. They may just need a 1/4 turn. A 2p piece is the perfect tool if you don't have the right sized screwdriver.

Winter Care Precautions

During extremely cold winters, where daytime temperatures are below zero for several days, it is wise to ensure that the tank is only about 2/3rd's full and the water supply turned off. This will prevent the frozen water from expanding and damaging the tank.